

Play & Leisure


The Power of Play


Installation Details For Quest Columbia Activity Unit (QU03)


- 1 Construct base as per layout drawing P/QU03/01 ensuring the correct levels for safety surfacing.
- 2 Excavate 400mm x 400mm holes for Posts as in drawing P/QU03/02 to a depth of 500mm **(800mm for loose fill)** from finished safety surfacing height. (All Posts have finished ground level marks)
- 3 Position the Posts as per drawing P/QU03/02.
All posts are numbered.
(Tap holes with a 10mm tap and make sure bolts are only hand tight at this stage)
- 4 Fit the Posts in to the excavated holes and connect together using the various components as in drawing P/QU03/04 and the attached visual.
- 5 Excavate 400mm x 400mm holes for events as in drawing P/QU03/03 to a depth of 500mm **(800mm for loose fill)** from finished safety surfacing height.
- 6 Connect the events as per drawing P/QU03/04 using M10 x 30 resistorx & nylon washers.
- 7 Connect all ropes using the 8mm quick links & vandal pins
- 9 Once all equipment is fitted check levels again, ensure minimum distances illustrated in P/QU03/01, tighten all bolts and concrete in to the ground.



FM 3474

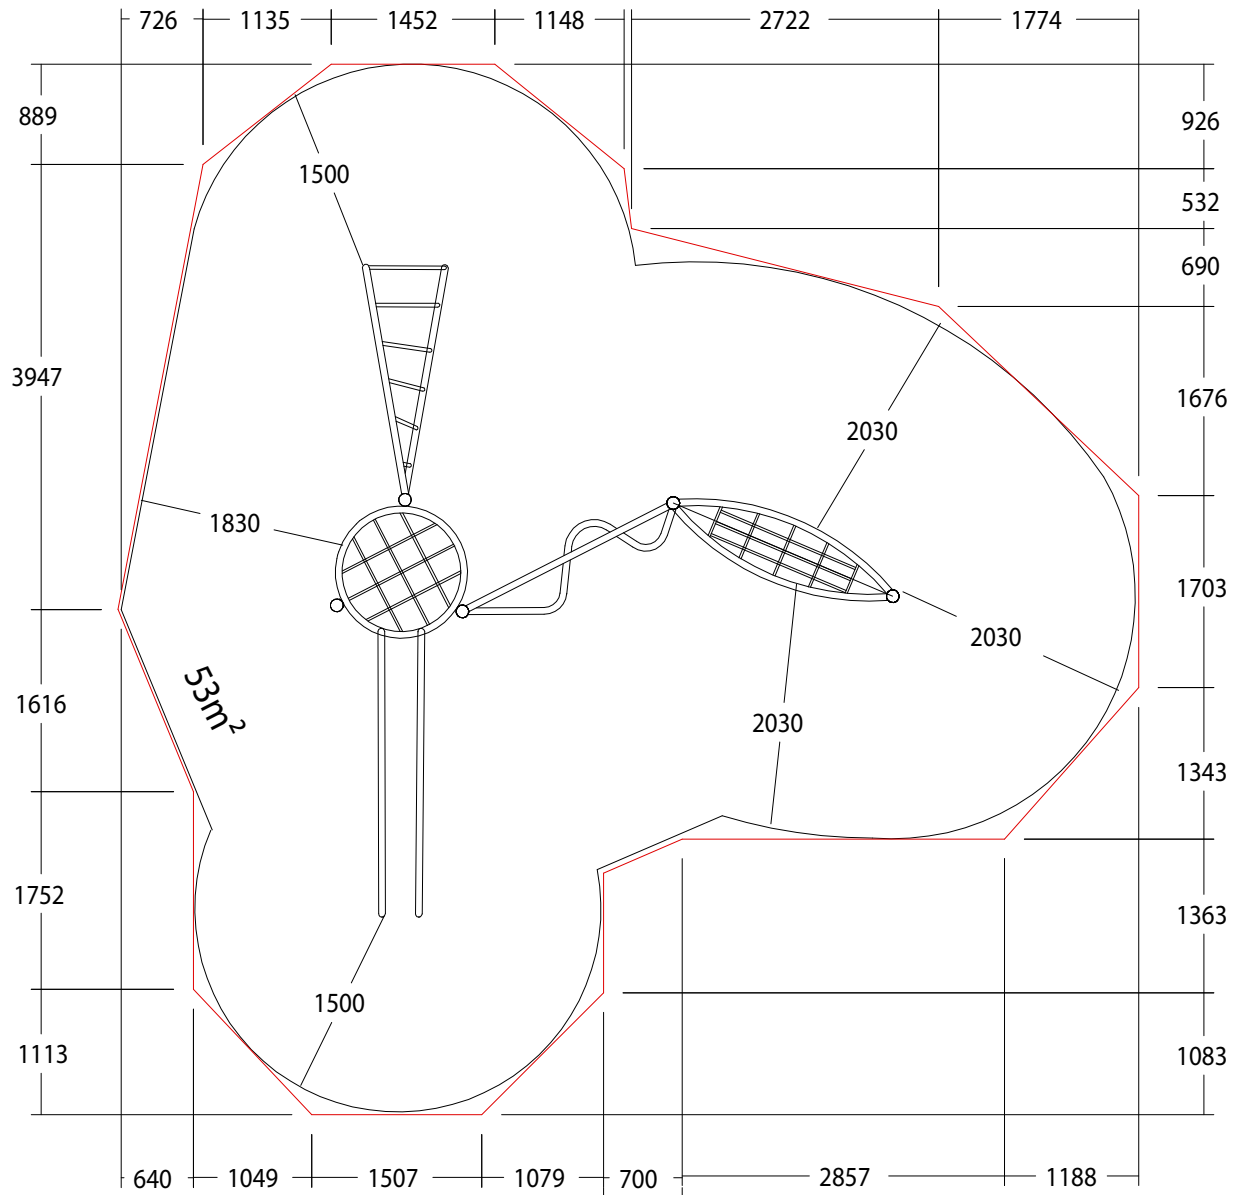

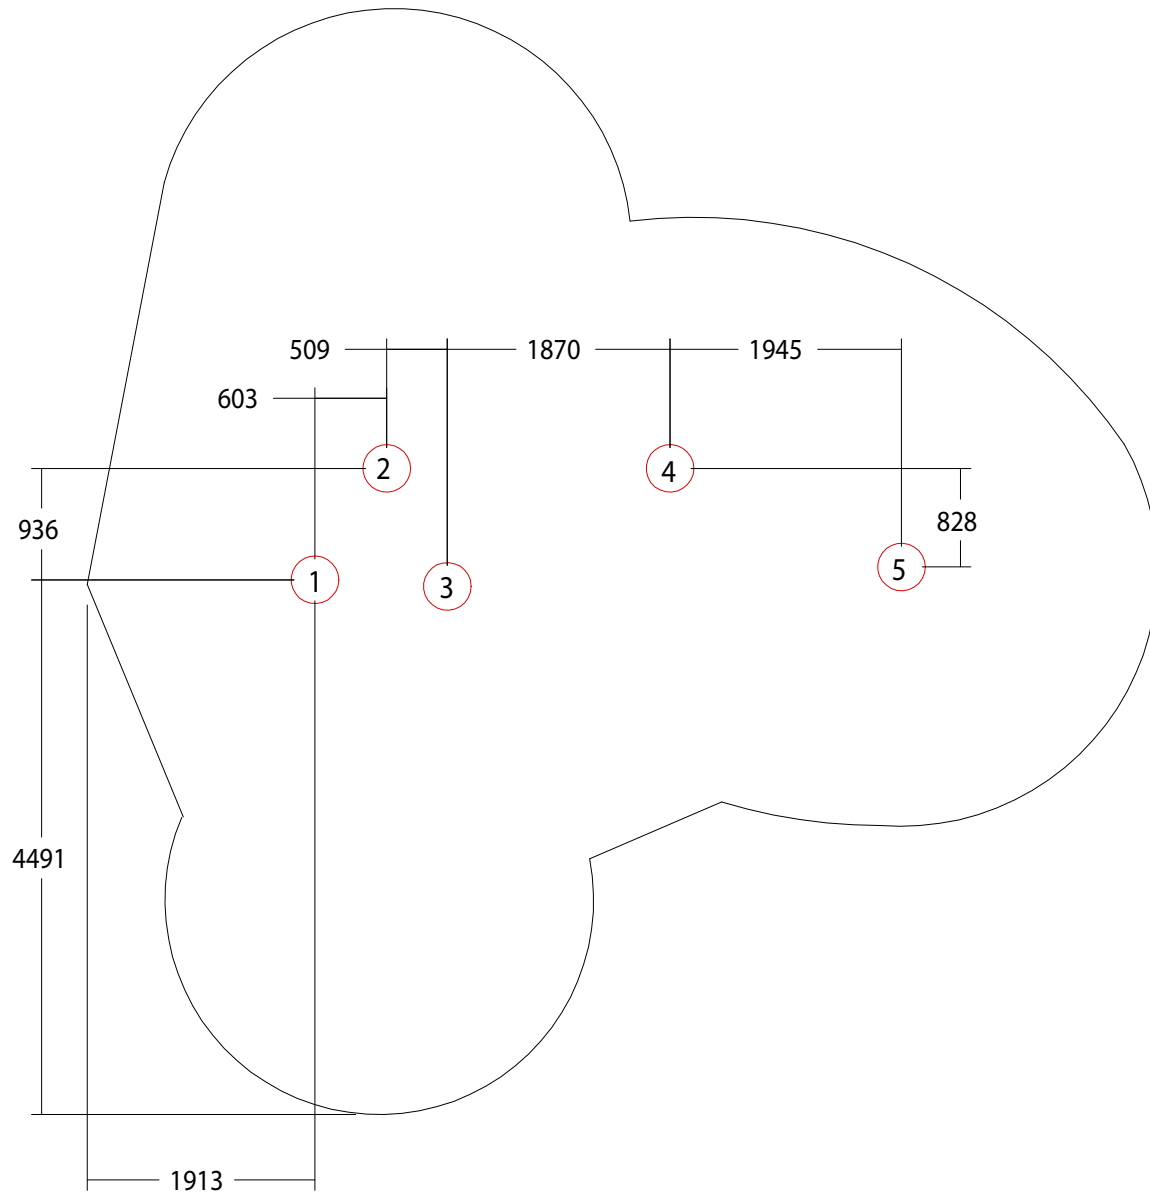

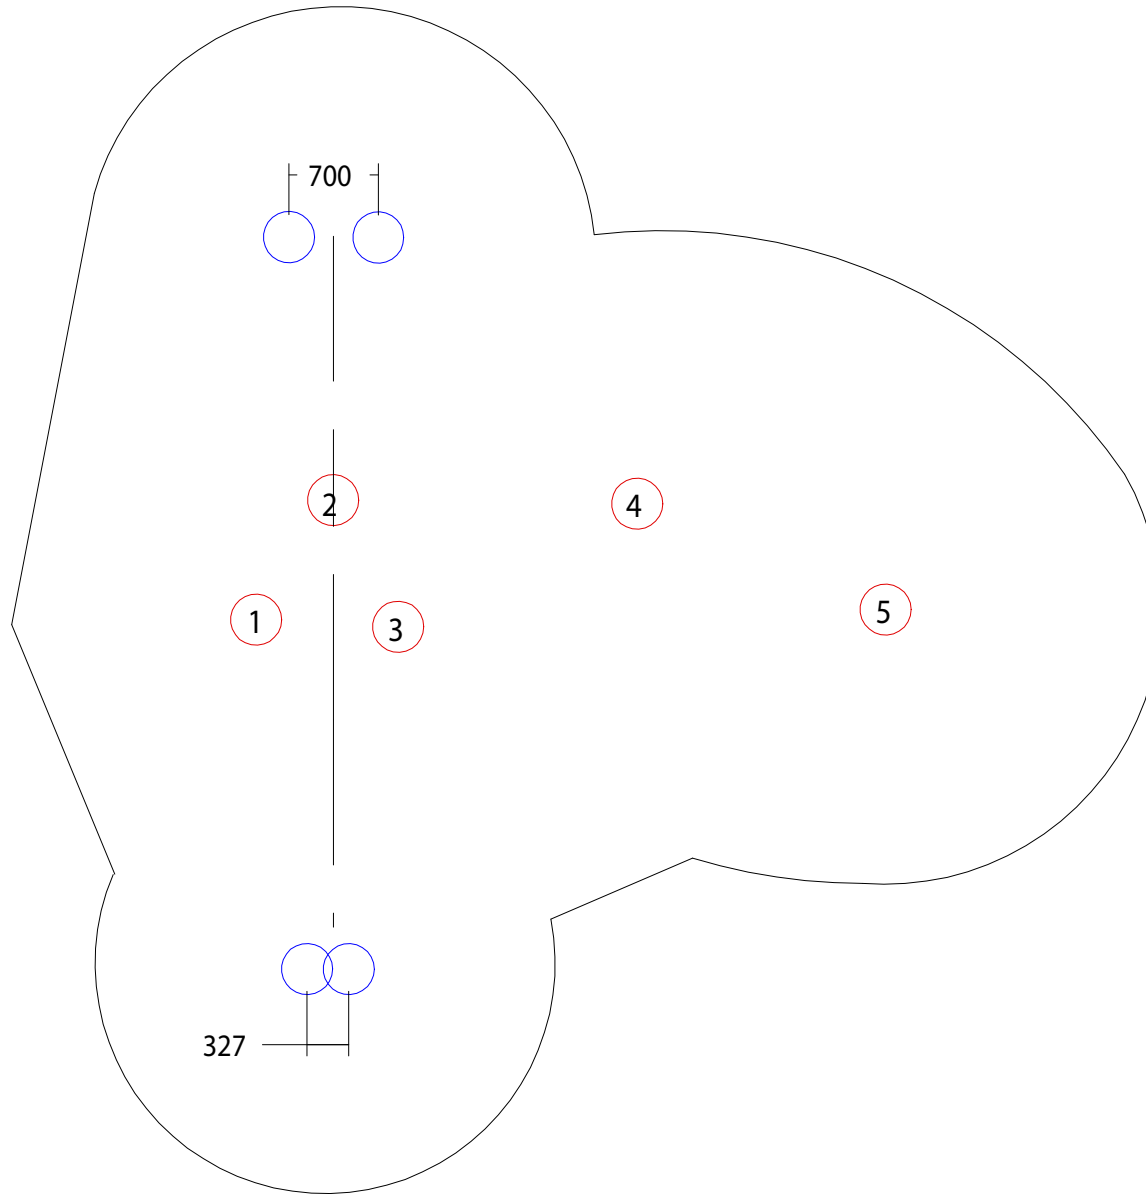

Curved Ladder

Up & Over Link

Rope Platform

53M²

Cargo Net

Parallel Bars